


# CH Hood Clip ACCL-05 Kit Instructions

Clamps multiple VME Connectors together so they can be connected or disconnected as one connector.

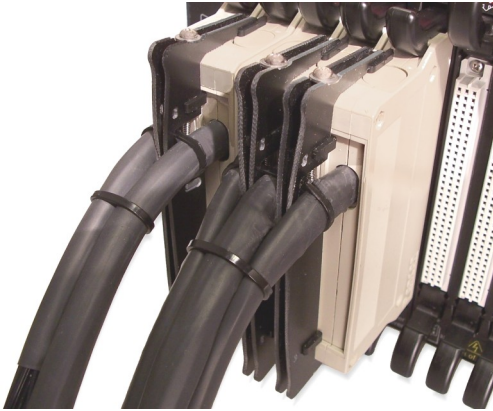

## Before You Start

In the ACCL-05 Kit you should have received:

Five Hood Clips



Five 7" Tie Wraps




To install the clips you will need a size #1 Phillips screwdriver.



You may also need a smaller size #0 Phillips screwdriver.



Cirrus recommends no more than five connectors be clipped together.

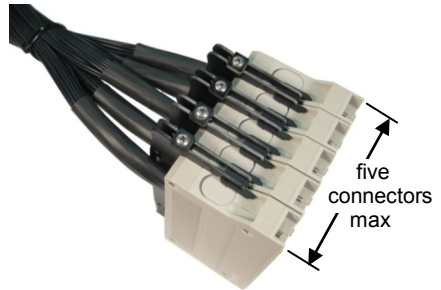

This will ensure good alignment, and allow the connector group to be connected or disconnected easily.


## Installing the Clip

If a CH Tester is available, attach the connectors to be clipped onto the Tester. This will help align the connectors.


If a tester is not available, you will have to attach the a clip while holding two connectors next to each other.



Slide a hood clip between the connectors.

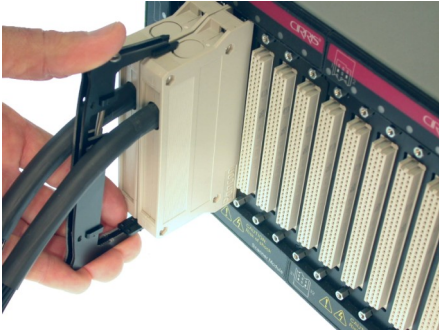


Push the clip securely in place against the connectors.

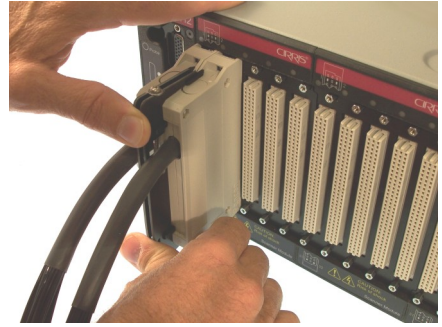

Make sure the clip is flush to the back side of both connectors.


**Yes**

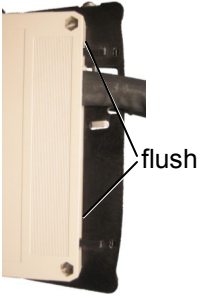

**No**




Holding the clip securely, tighten the clip using the #1 screwdriver.

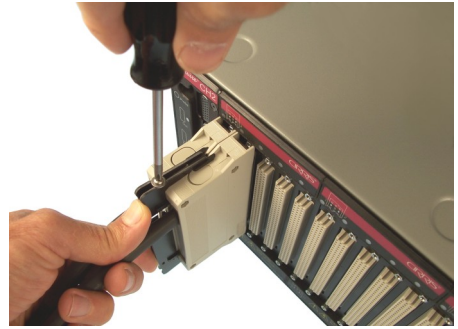

Remove the clipped connectors from the tester. Inspect that the front of the connectors are aligned.

**aligned**

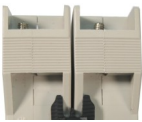

**not aligned**



If necessary, loosen and realign the connectors.



Apply the supplied tie wrap to secure the cables together. Cut off excess.

